

How To Use

Cordless Saw Blade for Glass

Attach the Alpha® Cordless Saw Blade for Glass onto the battery powered saw.

Make sure that the directional arrows on the blade match the spindle rotation of the tool.

The Alpha® Cordless Saw Blade for Glass is a WET cutting blade. Make sure the refillable water coolant bottle attached on the saw is filled prior to starting your cutting applications.

Adjust the depth of your cut; generally if the blade is 1/8" below the material you are cutting, this is sufficient.

Slowly push the blade into the material maintaining a consistent slow traverse speed until you cut the entire piece of material. A slow consistent pushing motion will allow the diamonds within the blade's cutting edge to cut the material easily and minimize chipping on the edge.