
Alpha® PSP-158/PSP-114/ PSP-114N Pneumatic Polishers Parts List




Part No: PSP-158/PSP-114/PSP-114N
Version 03/2026




16 Park Dr Ste 9, Franklin, NJ 07416 • 800-648-7229 • Fax: 800-286-0114
www.alpha-tools.com


ALPHA® PSP-158/PSP-114/PSP-114N PNEUMATIC POLISHER

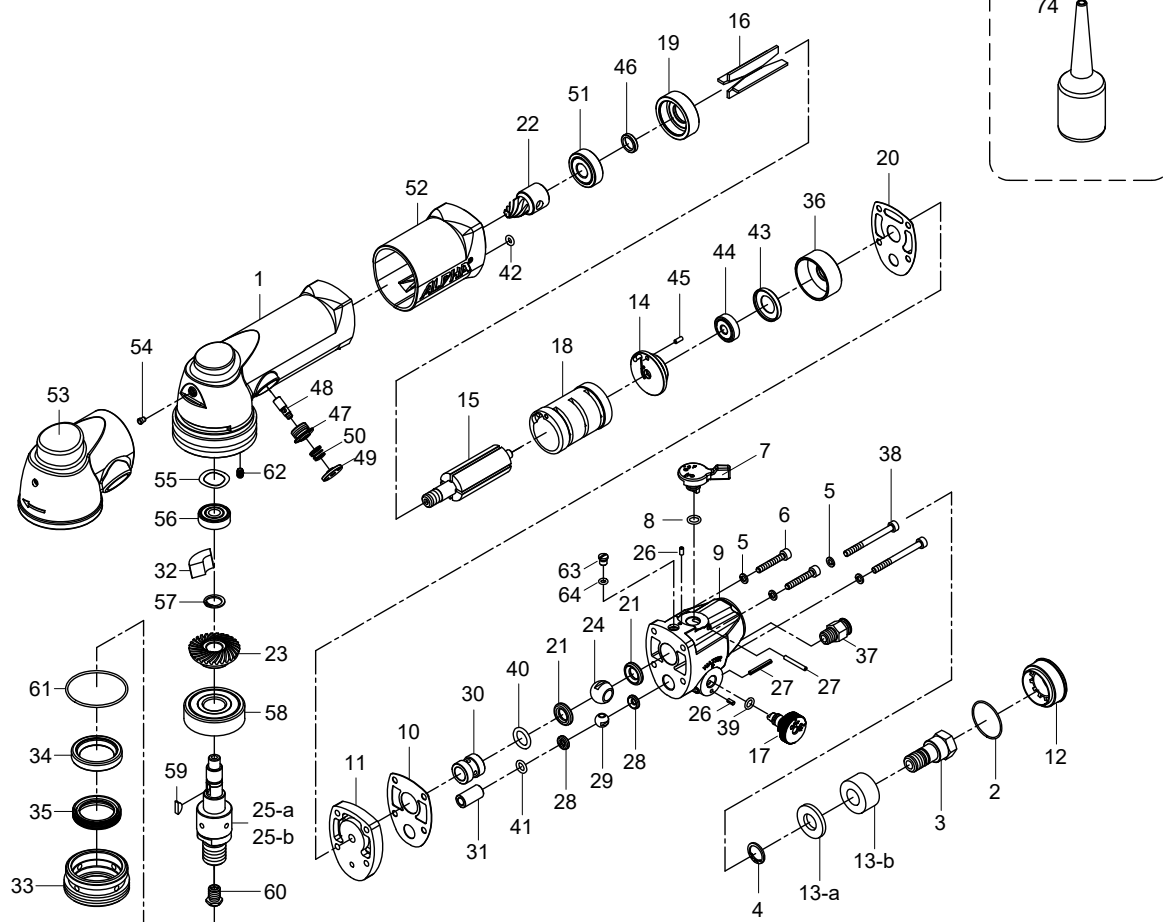

PSP-158

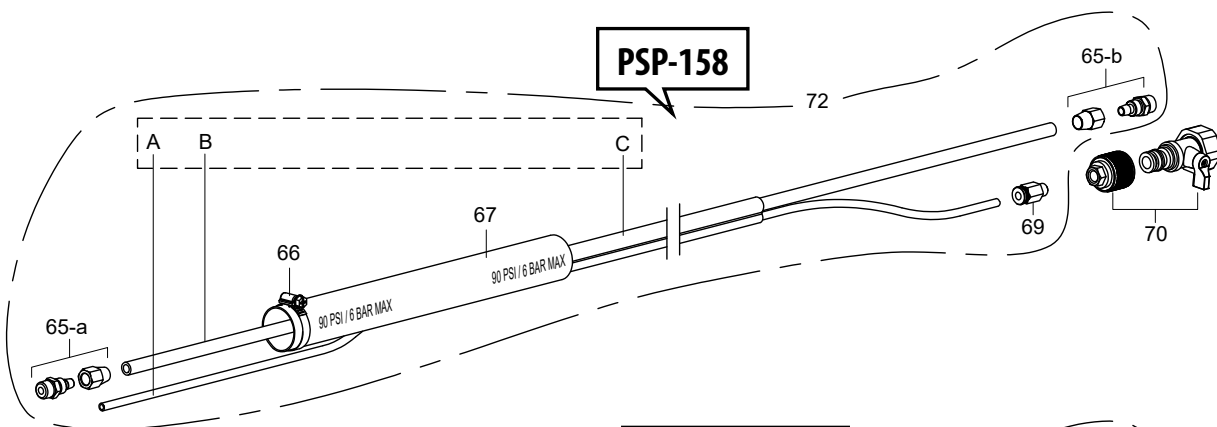

PSP-114/114N

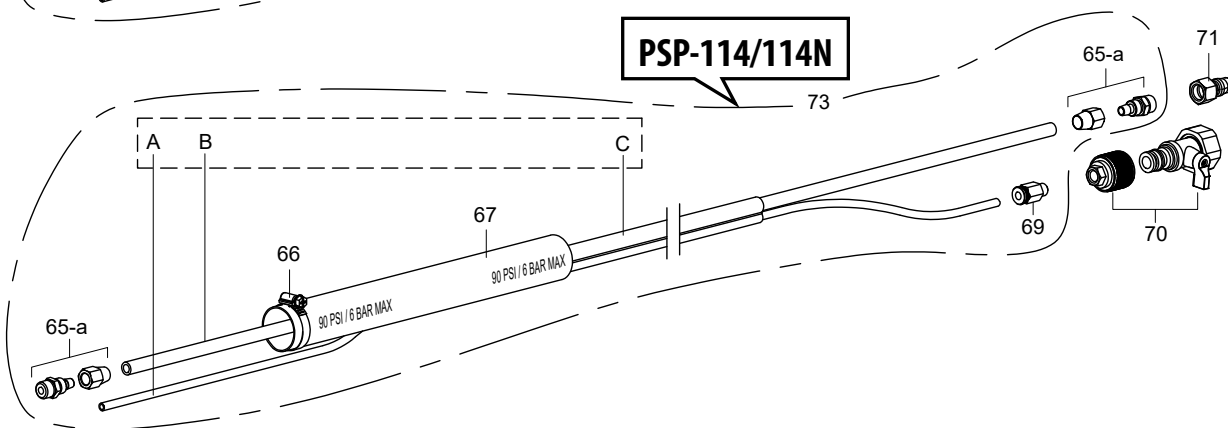

ALPHA® PSP-158/PSP-114/PSP-114N PNEUMATIC POLISHER

DRAWING NO.	PART NO.	DESCRIPTION	QTY
1	3003-0001	Body	1
2	3003-0002	O-Ring (25x1)	1
3	3003-0003	Air Inlet (G1/4" - 19)	1
4	3003-0004	Snap Ring (ISTW-12)	1
5	3003-0005	Spring Washer (M4)	4
6	3003-0006	Socket Head Screw (M4x25L)	2
7	3003-0007	Air Valve Lever (Inc. Part No. 3003-0008)	1
8	3003-0008	O-Ring (6.5x1.5)	1
9	3003-0009	End Case	1
10	3003-0010	Body Gasket	1
11	3003-0011	Spacer	1
12	3003-0012	Exhaust Cover	1
13	3003-0013	Muffler (14.2 X 24.8 X 3t)	1
13	3003-0070	Muffler (15 X 23 X 9T)	1
14	3003-0014	Rear Bearing Case	1
15	3003-0015	Rotor	1
16	3003-0016	Vanes (4pc Set)	1
17	3003-0017	Water Valve (Inc Part No. 3003-0039)	1
18	3003-0018	Cylinder	1
19	3003-0019	Front Bearing Case	1
20	3003-0020	Body Gasket	1
21	3003-0021	Air Ball Seat	2
22	3003-0022	Spiral Bevel Pinion Gear	1
23	3003-0023	Spiral Bevel Gear	1
24	3003-0024	Air Ball	1
25	3003-0025	Spindle (5/8-11 Unc)	1
25	3003-0026	Spindle (M14 X 2.0p)	2
26	3002-0025	Spring Pin (2.5x5)	2
27	3003-0027	Spring Pin (2.5 X 20l)	1
28	3003-0028	Water Ball Seat	2
29	3003-0029	Water Ball	1
30	3003-0030	Air Spacer	1
31	3003-0031	Water Spacer	1
32	3003-0032	Oil Felt	1

ALPHA® PSP-158/PSP-114/PSP-114N PNEUMATIC POLISHER

DRAWING NO.	PART NO.	DESCRIPTION	QTY
33	3003-0033	Spindle Lock Nut	1
34	3003-0034	Seal (Sc 25 X 35 X 6)	1
35	3003-0035	Seal (SC 25 X 33 X 6)	1
36	3003-0036	Air Inlet Case	1
37	3003-0037	Water Push To Connect Fitting (6mm Od)	1
38	3003-0038	Socket Head Screw (M4 X 50L)	2
39	3003-0039	O-Ring (5 X 1.6)	1
40	3003-0040	O-Ring (10.5 X 2.7)	1
41	3003-0041	O-Ring (5.8 X 1.9)	1
42	3003-0042	O-RING (3.8 X 1.9)	1
43	3003-0043	Bearing Cap	1
44	3003-0044	Ball Bearing (626zz)	1
45	3003-0045	Spring Pin (2.5 X 6l)	1
46	3003-0046	Rotor Spacer	1
47	3003-0047	Spindle Lock Threaded Insert	1
48	3003-0048	Stop Button Pin	1
49	3003-0049	Button Seat	1
50	3003-0050	Spring	1
51	3003-0071	Ball Bearing (6000ZZ)	1
52	3003-0052	Body Cover	1
53	3003-0053	Silicon Head Cover	1
54	3002-0016	Lubricator	1
55	3003-0054	Wave Washer (BWW608)	1
56	3003-0055	Ball Bearing (608ZZ)	1
57	3003-0056	Snap Ring (ISTW-11)	1
58	3003-0057	Ball Bearing (6302ZZ)	1
59	3003-0058	Woodruff Key	1
60	3003-0059	Spray Nozzle	1
61	3003-0060	O-Ring (40x1.5)	1
62	3003-0061	Insert Screw (M4x 6L)	1
63	3003-0062	Oil Port Screw (Inc Part No. 3003-0040)	1
64	3002-0040	O-Ring (3.5x1.5)	1
65A	3003-0063	Fitting W/Comp Nut 1/4"-19 BSPT	1
65B	3003-0064	Fitting W/Comp Nut 1/4"-18 NPT (PSP-158 ONLY)	1

ALPHA® PSP-158/PSP-114/PSP-114N PNEUMATIC POLISHER

DRAWING NO.	PART NO.	DESCRIPTION	QTY
66	3003-0065	Hose Clamp Ss (25-35mm)	1
67	3003-0066	Exhaust Hose 1m (PSP Only)	1
69	3003-0067	Push-In Connector 1/8"-28 Bspt	1
70	3003-0068	Qc Shut-Off Valve Assem	1
71	3003-0069	Nitto Coupler (PSP-114N Only)	1
72	1030-0200	Compl Twin Hose Assem-PSP-158	1
73	1030-0201	Compl Twin Hose Assem-PSP-114	1
74	AIR-008	Rust Inhibitor Oil (8oz / 237ml)	1